

INSTALLATION INSTRUCTIONS



THE REMOVABLE MUD FLAP SYSTEM

- 1** Begin by installing your *ROADWING* (without flaps) on your vehicle by sliding your hitch ball mount through your new *ROADWING* and mounting into the hitch receiver (see diagram 1). Some applications may require a longer ball mount as a minimum of 2" of ball mount shank is required to stick out past the hitch receiver.

LIABILITY WARNING: Do not modify a ball mount in any way. Due to powder coating or painting, your *ROADWING* or ball mount may require lubrication for the *ROADWING* to slide on the first few times.

- 2** With the *ROADWING* installed on your vehicle, the vehicle parked on level ground and the *ROADWING* level with set bolts tightened, measure from the bottom of the square tubing to the ground to determine flap length (see diagram 2). We recommend either hooking up to your trailer or subtracting 2 to 3 inches to allow for tongue weight.

- 3** Cutting flaps: After determining correct length, measure from the top of the flap down to the desired length, mark the smooth side then carefully cut with a straight edge and razor knife. (See diagram 3).

- 4** Assemble flaps as per diagram 4. Tighten nut until they look and feel snug (do not overtighten).

Enjoy towing protection with the Quality and Ease of your new *ROADWING*!

ROADMASTER, INC. does not in anyway guarantee protection by using the *ROADWING* removable flap system. ROADMASTER, INC. does not assume any liability whatsoever relating to the use, function, handling or installation of this product.

Diagram 1

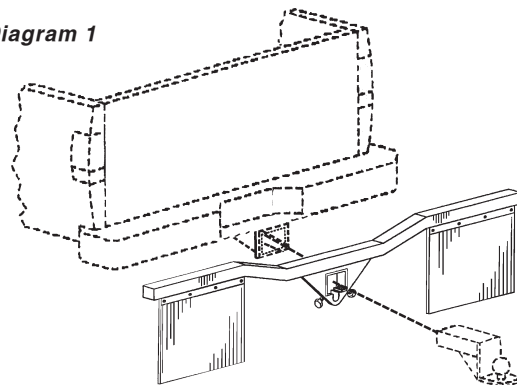


Diagram 2

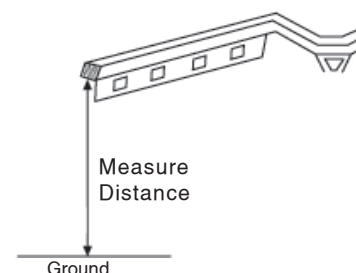


Diagram 3

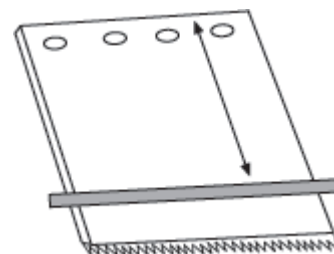


Diagram 4

